

(full: green, almost empty: red)

Charging

http://192.168.50.1

Use the db150

Power on the db150.

Wait for the status LED to signal Ready for take-off.

Battery level is the color of the LED

Wait for the status LED to signal Ready for take-off.

Battery level is the color of the LED

Press configuration button (status LED is now white) and connect to dronebeacon WLAN network. Point your browser to

Status LEDs

OUICK START (rev 20240527)

You are ready to fly.



Contact Please contact us at info@bluemark.io or by phone: +31 53 711 2104, if you need more



https://download.bluemark.io/db150.pdf

information.