

(full: green, almost empty: red)

Status LEDs

Use the db154 Power on the db154. Acquiring location. LEDs are on. Wait for the status LED to signal Ready for take-off. Battery level is the color of the LED

OUICK START (rev 20241119)

You are ready to fly.

Press configuration button (status LED is now white) and connect to dronebeacon WLAN network. Point

Charging

vour browser to

http://192.168.50.1



Contact

Please contact us at info@bluemark.io or by phone: +31 53 711 2104, if you need more information.



https://download.bluemark.io/db154.pdf

manual